


APOLLO ELECTRIC BATHTUB

QUICK START GUIDE

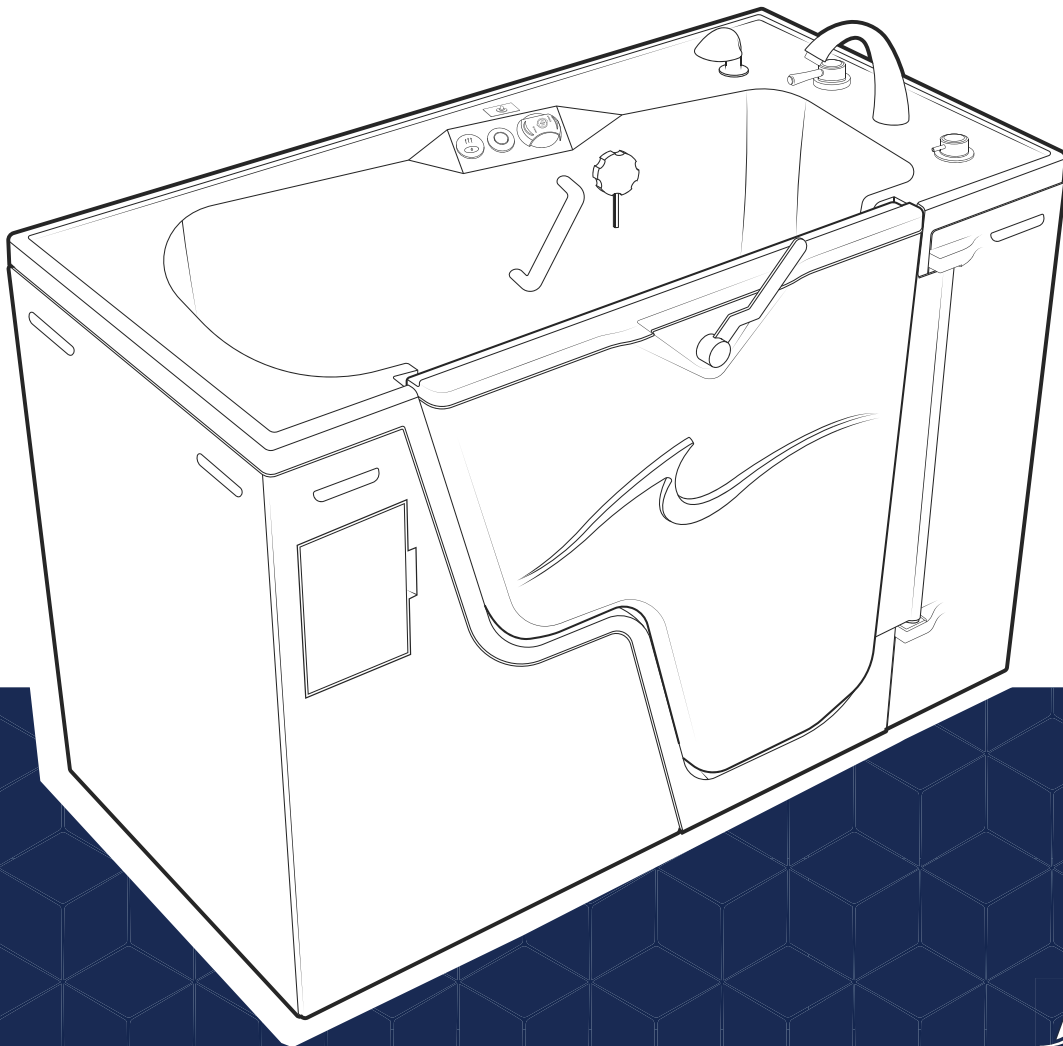

Operation Instructions


For better and more effective use of our Apollo Bathtub, thoroughly and carefully read all the given instructions and follow them with great focus:

A ENTRY IN THE BATHTUB:


Note: Do not enter or leave the bathtub until it is fully drained.

To enter or leave the bathtub, follow the instructions given below;


1. Open the door by unlocking it from the lock handle on the outside of the bathtub's door.

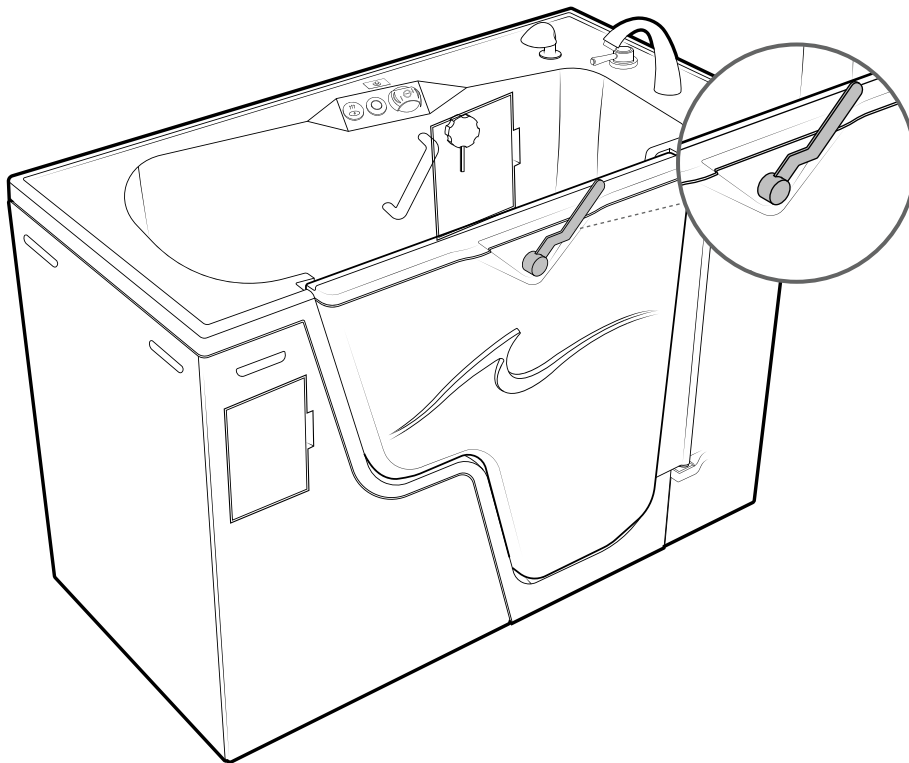

- 2.** Hold the door's grab bar from inwards, to avoid any slip while entering the bathtub.

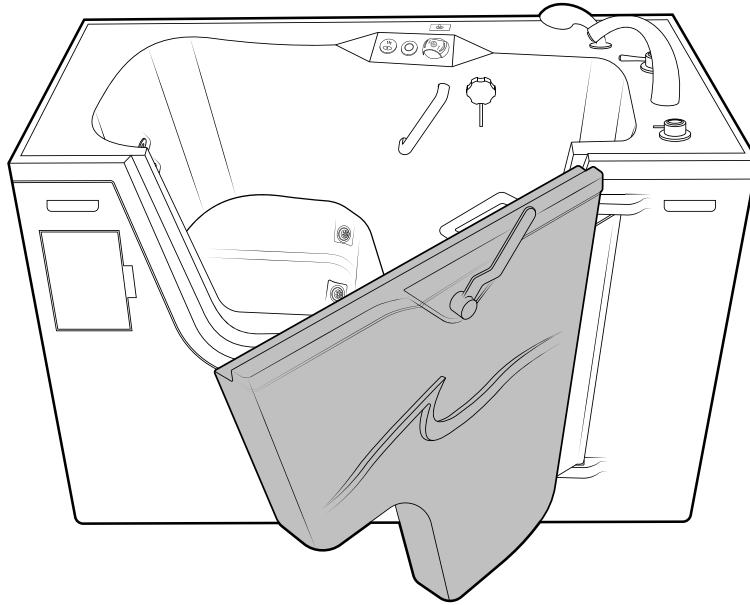


- 3.** In a standing position, close the door and lock it from the outside.
- 4.** Using the safety grab bar, sit in the sitting place.

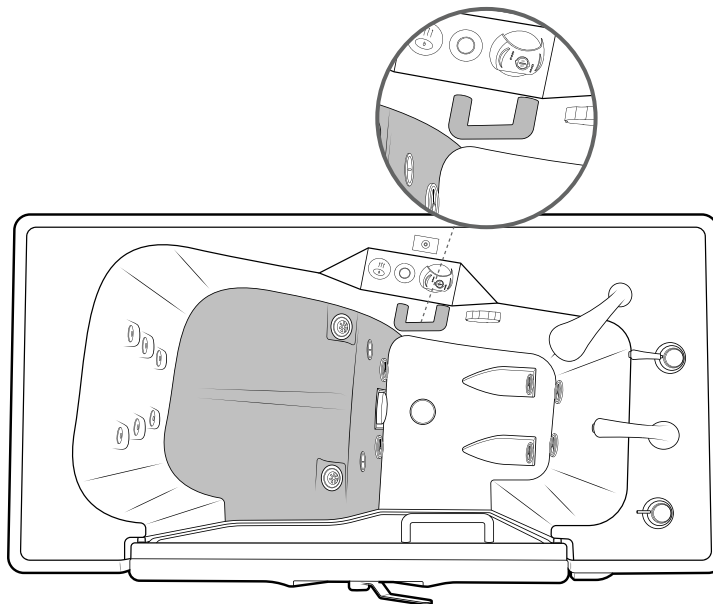

B FILLING AND DRAINING THE BATHTUB:

To fill or drain the bathtub, follow the instructions given below:

- 1.** Make sure the drains are closed, if the drain handles are open rotate them counter-clockwise to close them.
- 2.** Once you get the surety of the drain closure, Set the water temperature and fill the bathtub by opening the faucets.

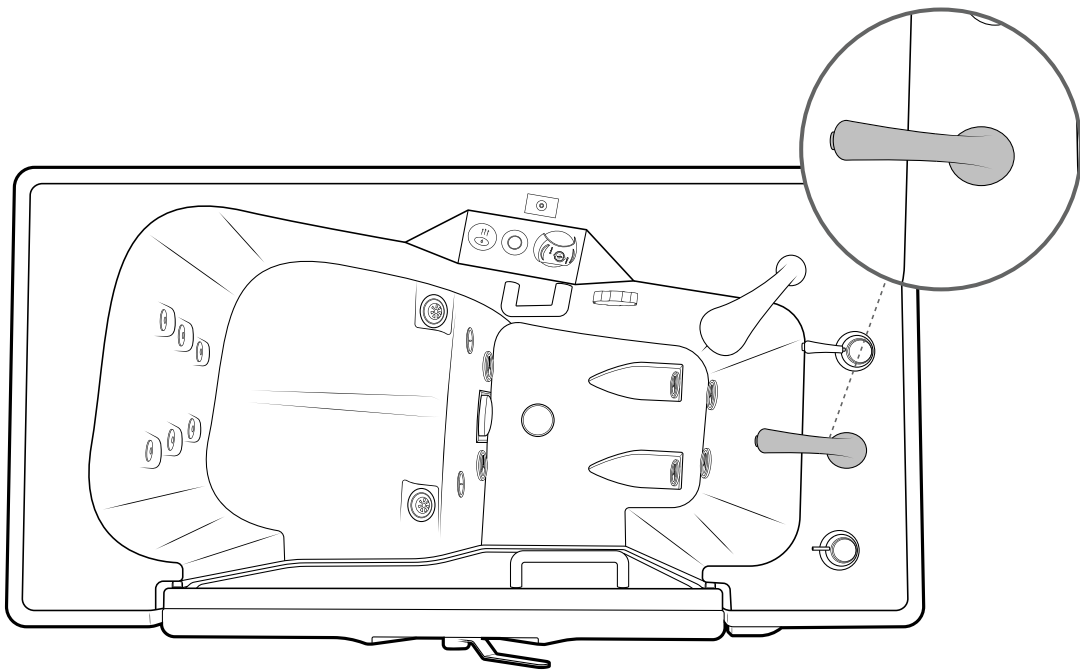

- 3.** To drain the bathtub, turn the draining handles clockwise.

Note: Do not try to open the door until the bathtub is fully drained.


C USING THE FAUCETS:

Our Faucet set has four pieces:

1. Shower
2. Fill Spout
3. Diverter
4. Thermostatic value


1. Shower:

It is used for different purposes during a bath. To use the shower, turn the “Diverter” towards the shower.

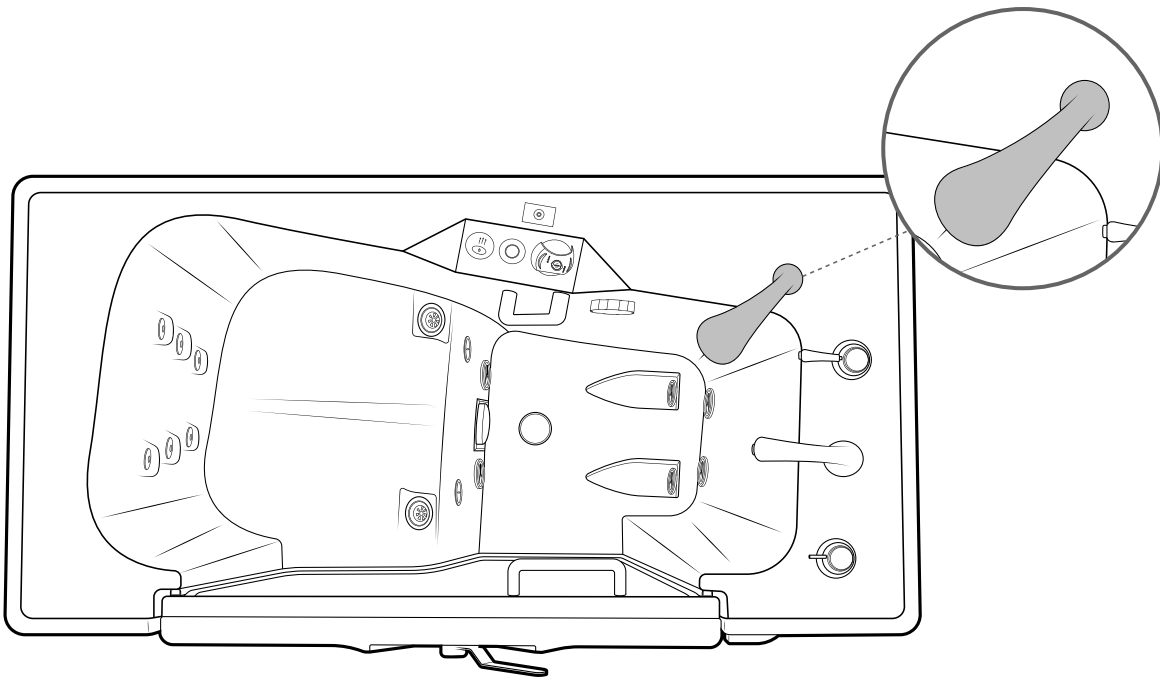

2. Fill Spout:

It is used for different purposes during a bath. To use the shower, turn the “Diverter” towards the shower.

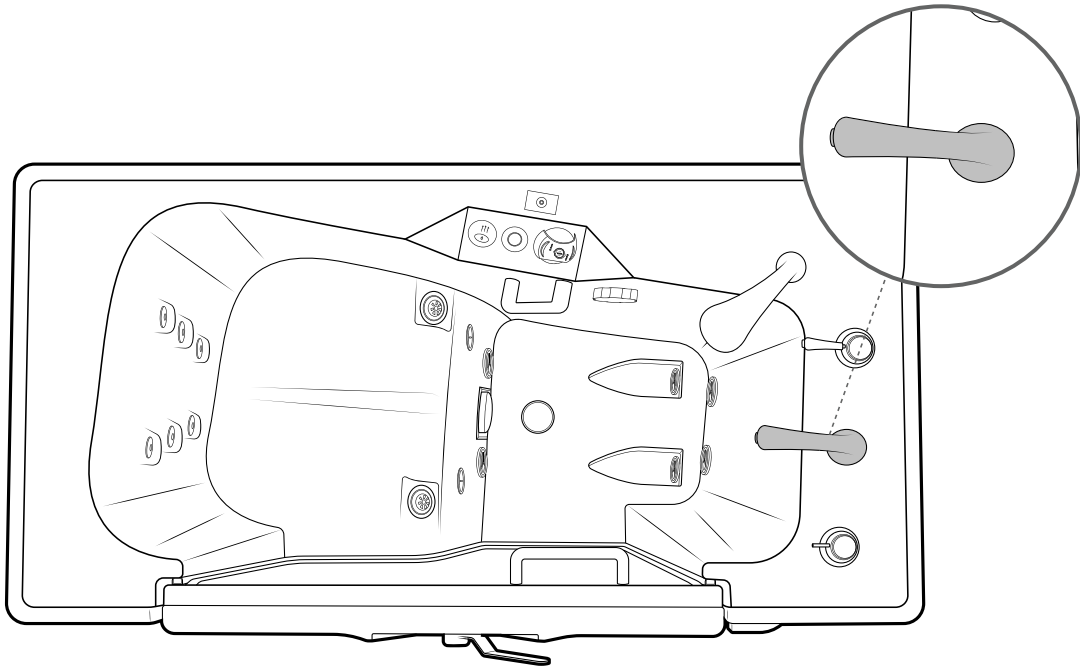


3. Diverter:


The diverters are used to control the water components such as the fill spout and shower hand of the bathtub.

The diverter has 3 positions to set the faucets:


- a. To turn off the fill spout or water shower, point the “Diverter” in the forward direction.

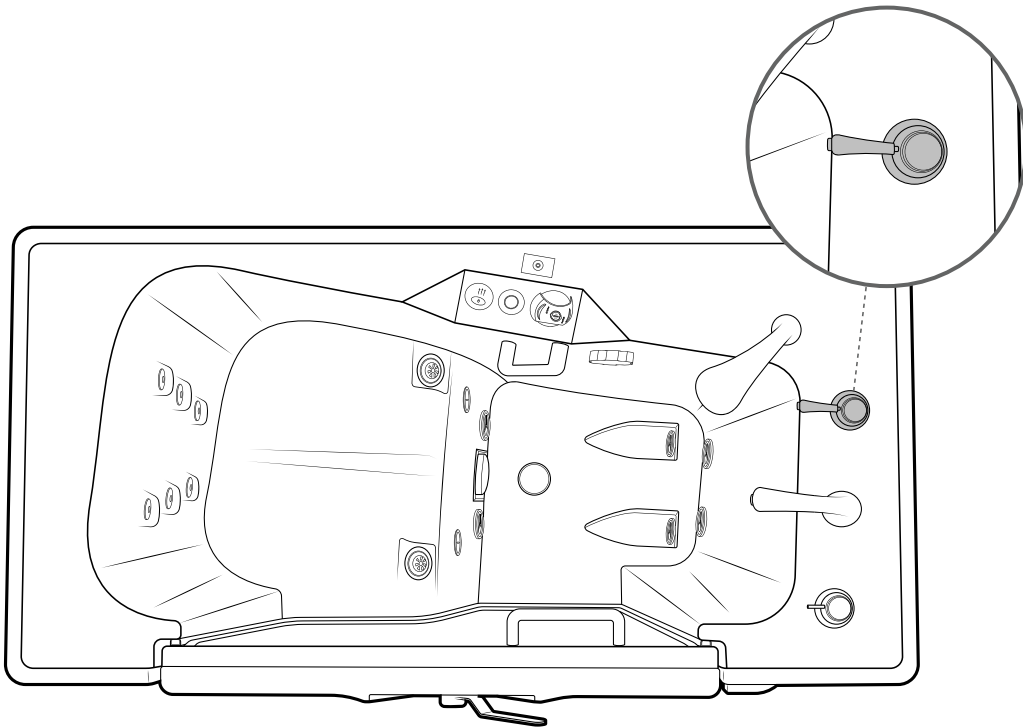

b. To turn on the shower, point and turn the “Diverter” towards the shower.

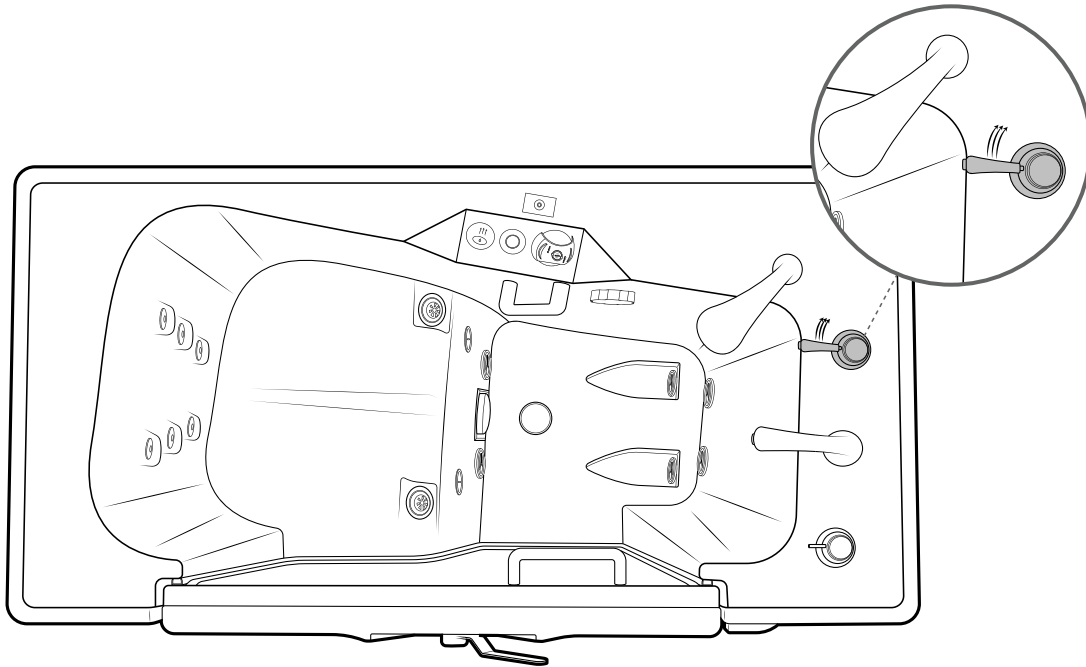


c. To turn on the fill spout turn and point the “Diverter” towards the fill spout.

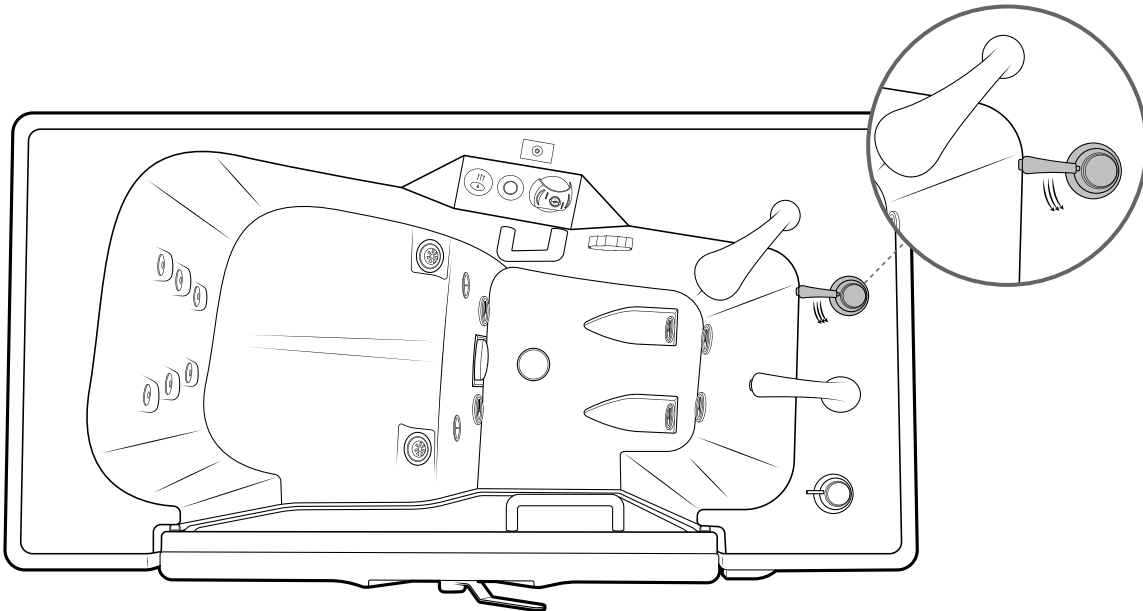


4. Thermostatic Valve:

A thermostatic valve is used to control the temperature of the bathtub.

- a. To increase the temperature, turn the “Thermostatic Value” in a counter-clockwise direction.

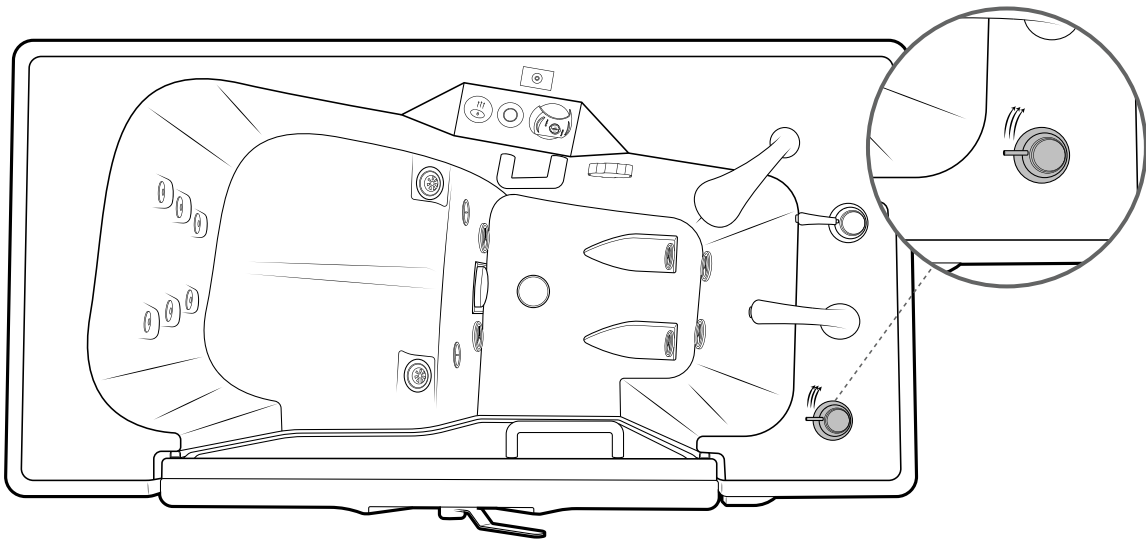


- b. To decrease the temperature, turn the “Thermostatic Value” in a clockwise direction.

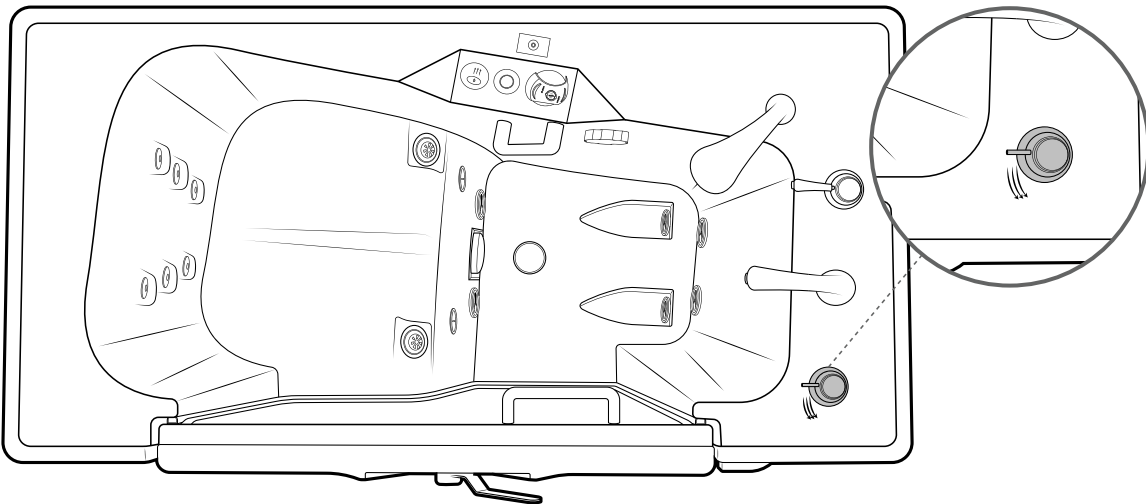

CONTROL PANEL:


The control panel has three options:

1. Seat heater
2. Whirlpool
3. Jet Air Control

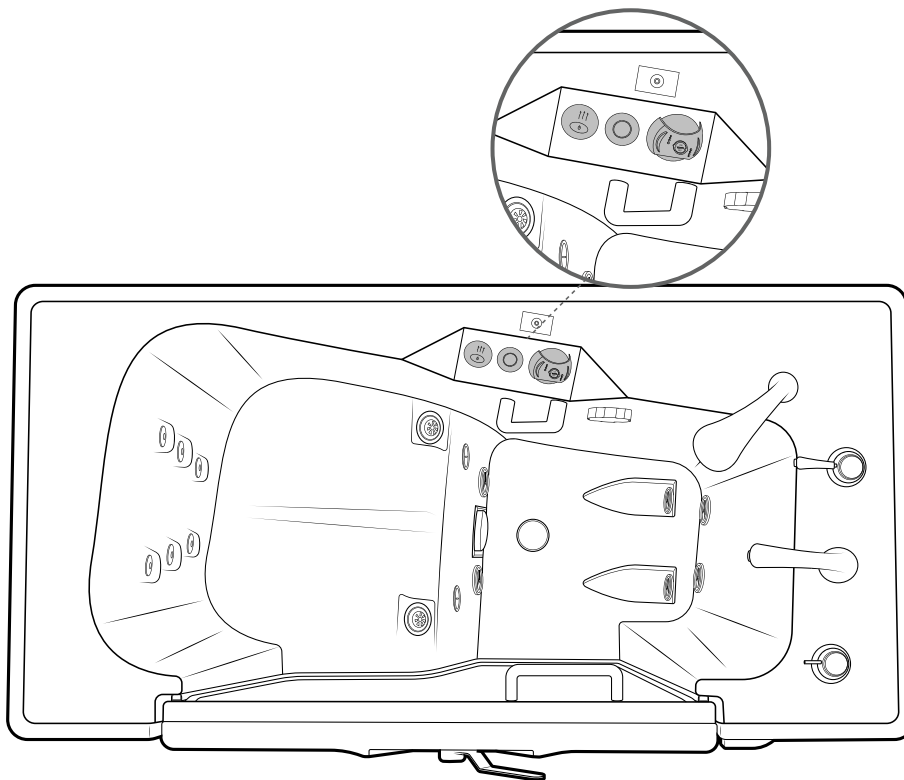

1. Seat Heater:

a. To turn on the seat heater, press the "Seat Heater" button.

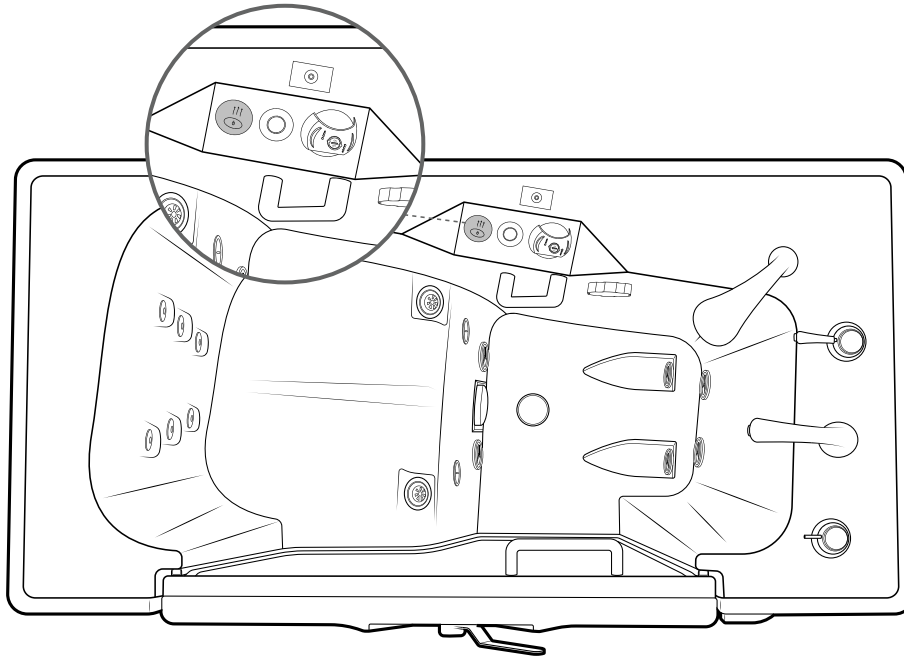


Note: Wait for a while and do not press it again as it will turn the seat heater off.

b. To turn off the seat heater, press the "Seat Heater" button.

2. Whirlpool:


- a. To turn on the Whirlpool system, press the “Whirlpool” button. This will also turn on the LEDs for UV and the inline water heater if these options are installed.
- b. To turn off the Whirlpool system, press the "Whirlpool" button again.

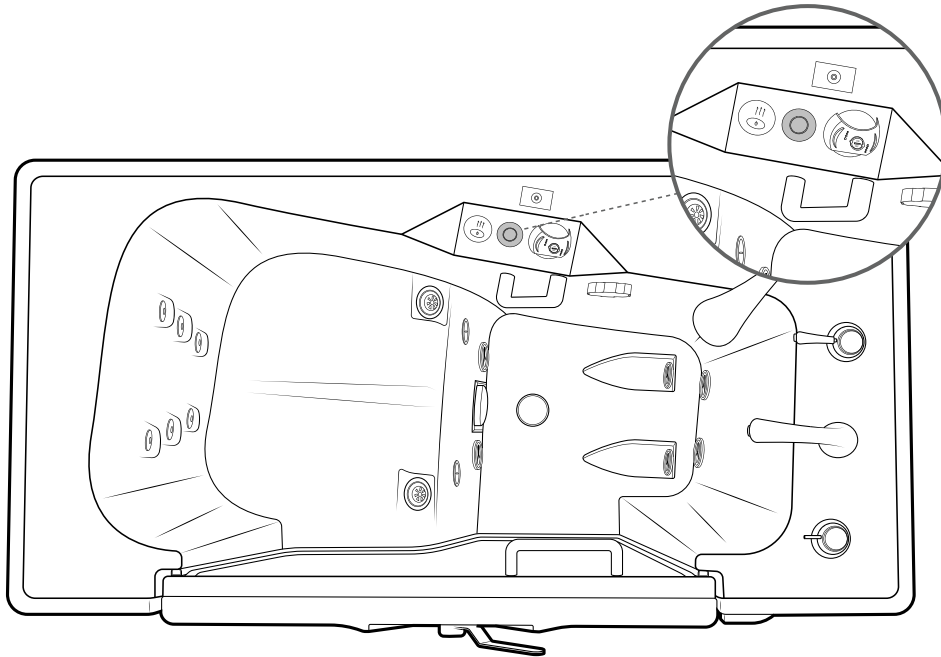

3. Jet Air Control:

To control the airflow “Air Control” knob is used, like:

- a. For reducing the airflow rotate the "Jet Air Control" knob clockwise.

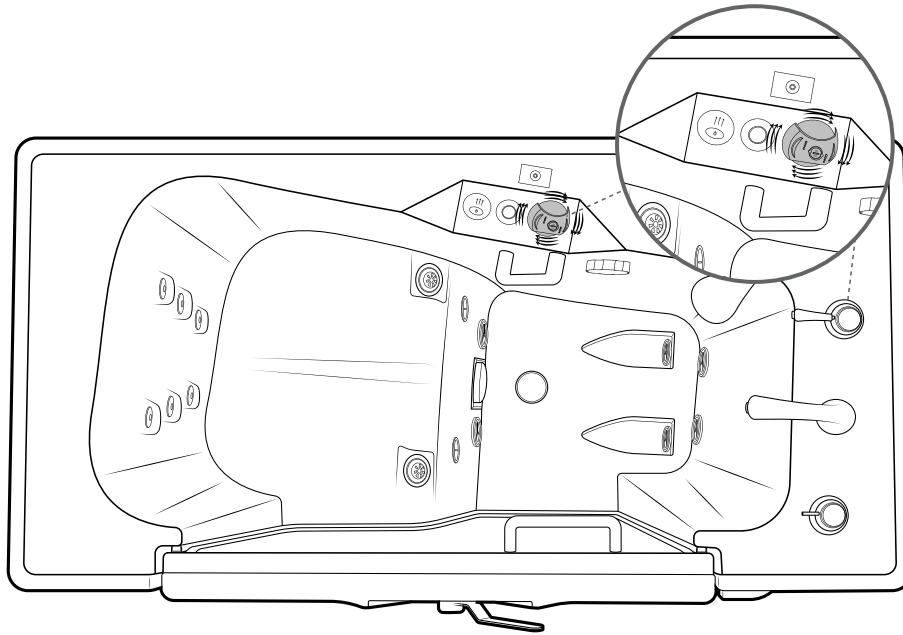

- b. For increasing the air flow rotate the "Jet Air Control" knob counter clockwise.

