


Essence Spa Specifications/Installation (Manual Part Number 990-100)

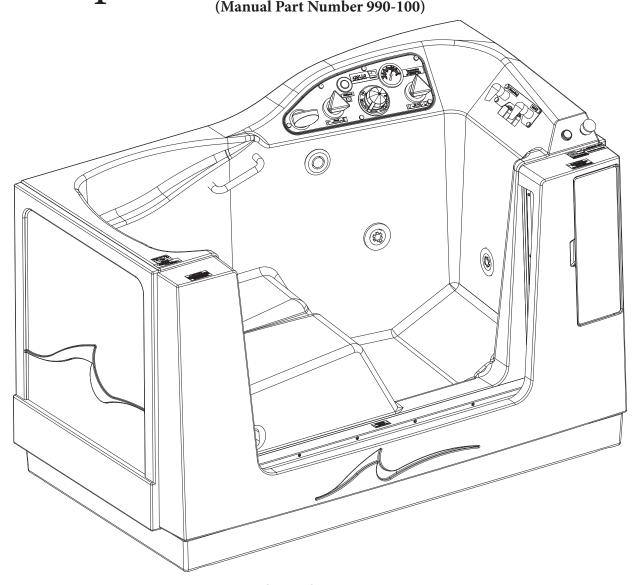

450 Main Street, Somerset, WI 54025 Phone: 715.247.5625 Fax: 715.247.3424 http://www.apollobath.com

Important Installation Highlights


Failure To Comply With These Items Will Greatly Compromise The Functionality Of The Bathing Unit And May Void The Warranty.

- The bathing system is to be installed **AFTER** all construction and finish work is completed.
- Flush Hot and Cold water lines prior to connecting to bathing system.
- During and after installation, the bathing system <u>DOOR</u> must be in the <u>UP</u> position.
- The bathing system comes with a catch pan that will collect any residual water from the bathing process. THE DRAIN MUST BE CONNECTED AS SHOWN IN THIS MANUAL (pages 6 7).
- **REMEMBER**, no matter how well built a mechanical device may be, eventually they all need service. Plan your installation wisely and include access panels where recommended in this manual (pages 5-8).
- The bathing system has a removable front cover for service access. The finished installation must allow the cover to be removed.
- Forcing the door up or down with power and air applied to the unit WILL cause damage to the actuators. Disconnect power from the unit and bleed off air before manually raising or lowering the door.

Plumbing and Electrical Codes

All states and municipalities could differ extensively in their plumbing and electrical codes. Therefore, it is Apollo Corporation's recommendation that you check with the proper enforcement agencies in your area before installation.

All Apollo bathing systems are manufactured with built-in back flow prevention. However, due to different plumbing codes, it is advisable that you ask your installer whether there is a need to install additional back flow prevention valves (such as RPZ valves) on any new construction.

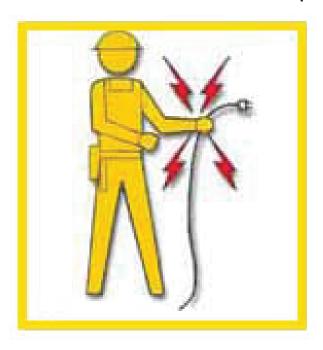

NOTE

- Lock Out or Tag Out electrical circuit for bathing system <u>BEFORE</u> installation.
- Electrical Protection: Class 1 Type B applied part.
- Bathing system installation must comply with all applicable building and health codes and regulations.
- It is recommended that hot water not greater than 120°F (49°C) be delivered to the bathing system.

Essence[™] Spa Specifications/Installation


Minimum Room Size:	69 in (183 cm) wide by 90 in (228.6 cm) long		
Dimensions:	Length	Width	Height
Tub:	59.51 in (151.1 cm)	33.63 in (85.4 cm)	40.75 in (103.5 cm)
With Side Panels:	61.63 in (156.5 cm)	34.88 in (88.6 cm)	40.75 in (103.5 cm)
Shipping Weight:	500 lb (227 kg)		
Installation Time:	1.5 Hours		
Inspection & Adjustments	1 Hour		
Water Capacity:	Maximum of 63 gal (238 L)		
Water Supply:	Requires two 0.75 in (1.9 cm) garden hose thread (GHT) internal, wall, or floor mounted faucets. Minimum of 30 PSI for hot and cold required.		
Water Connection:	Provided with two 60 in (152.4 cm) high pressure stainless steel hoses with 0.75 in (1.9 cm) GHT ends.		
Waste:	Two 1.5 in (3.8 cm) PVC schedule 40 pipe. Outside diameter 1.9 in (4.8 cm).		
Electrical Requirements:	Dedicated 115 VAC plug-in receptacle protected by a 15A GFCI circuit breaker (not supplied).		
Door Control:	24 VDC maintained, IP 65, dust proof, water resistant, sealed push-button switch for operation of powered door. Emergency release for door in case of power failure.		
Tub Fill:	RADA Thermoscopic mixing valve; ASSE 1016 certified		
Shower:	Hand held with 84 in (213.4 cm) ANSI A112.18.1 hose		
Tub Entry:	Door with 40 in (101.6 cm) opening and 10.25 in (26.0 cm) entry height		
Gaskets:	Dual gaskets extruded from EDPM.		
Whirlpool Pump and Motor:	0.75 HP; 7.5A; 115 VAC; 60HZ; 3370 RPM; 86 GPM at zero head.		
Whirlpool Control	On-Off pneumatic switch.		
Whirlpool Jets:	Three whirlpool jets with adjustable nozzles.		
Whirlpool Water Requirement:	36 gal (136 L) minimum required to run whirlpool jets without resident.		
Air Spa Blower Motor:	900W variable speed, thermally protected blower motor with 300W ceramic heating element, 120 VAC; 11.5A; 60 HZ.		
Air Spa Control:	Multifunction, low voltage DC electronic keypad.		
Air Spa Jets:	20 total air jets: Five seat and four leg jets with 24 openings each. One perineal and ten foot well jets with six lateral openings each.		
Air Spa Water Requirement:	None		
*Specifications subject to change			


Important Installation Highlights

- The bathing system is to be installed **AFTER** all construction and finish work is completed.
- ullet During and after installation, the bathing system \underline{DOOR} must be in the \underline{UP} position.
- The bathing system comes with a catch pan that will collect any residual water from the bathing process. THE DRAIN MUST BE CONNECTED AS SHOWN IN THIS MANUAL (pages 6 - 7).
- **REMEMBER**, no matter how well built a mechanical device may be, eventually they all need service. Plan your installation wisely and include access panels where recommended in this manual (pages 5-8).
- The bathing system has a removable front cover for service access. The finished installation must allow the cover to be removed.
- Forcing the door up or down with power and air applied to the unit **WILL** cause damage to the actuators. Disconnect power from the unit and bleed off air before manually raising or lowering the door.


November 2017 **Revision 8** -4-

Essence™ Spa Specifications/Installation

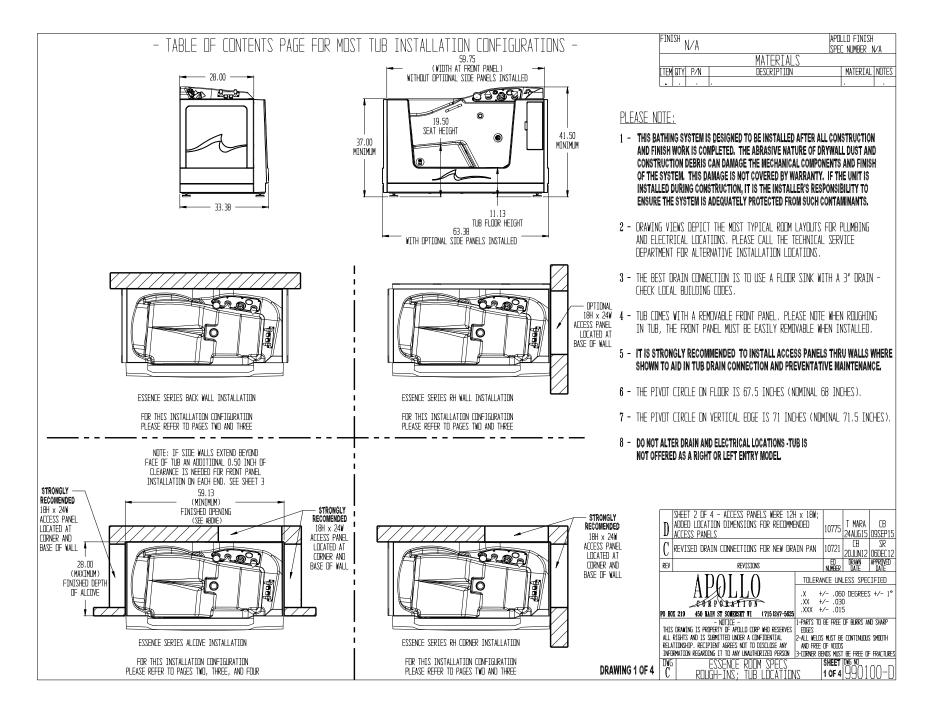

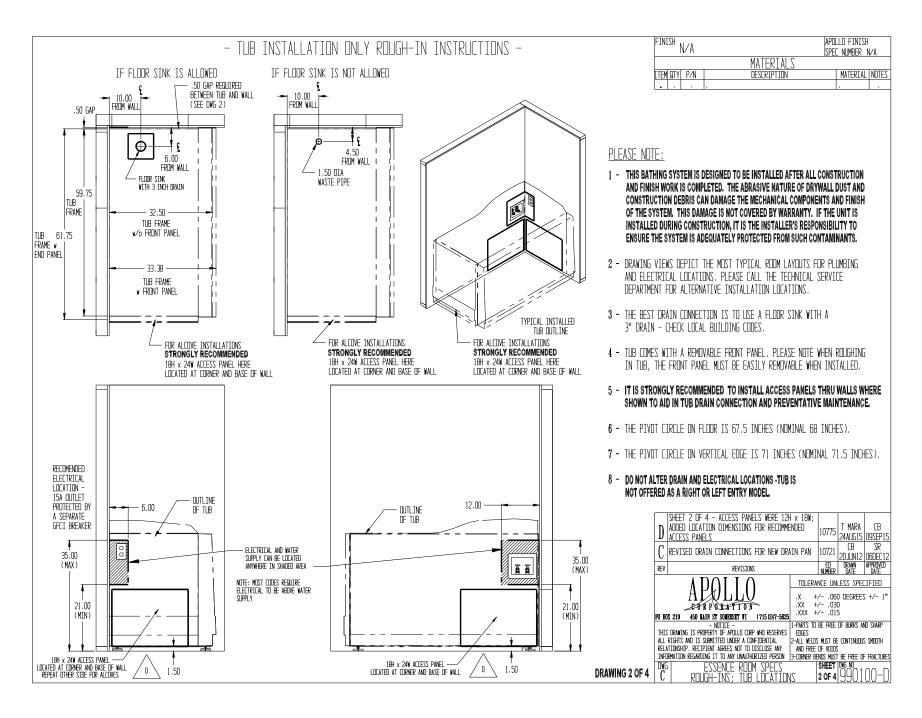

Essence™ Spa Specifications/Installation

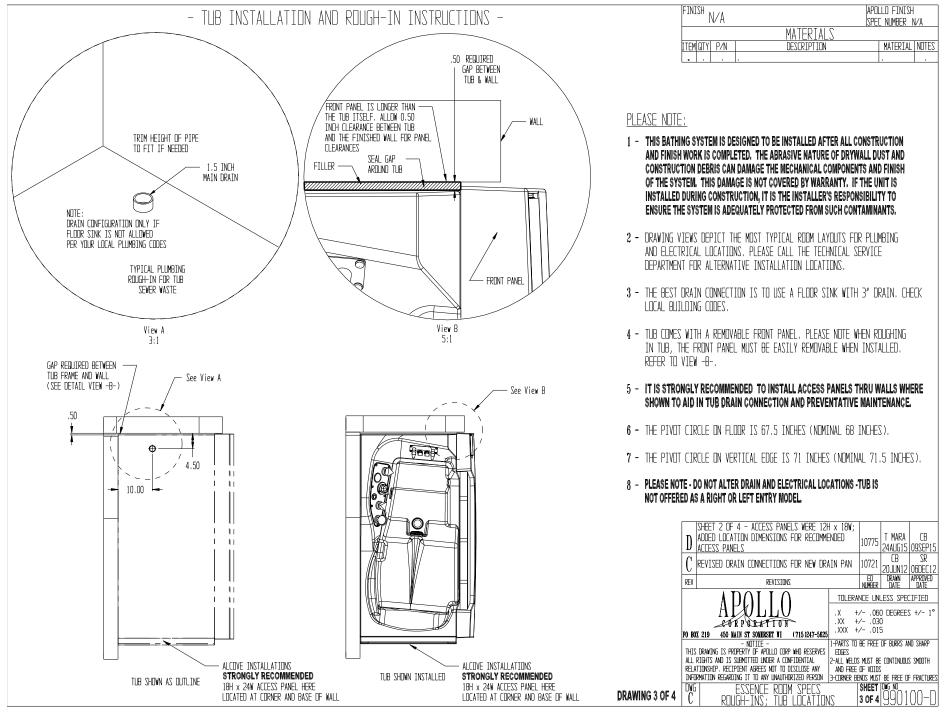

Essence™ Spa Specifications/Installation

